

Step 1: Hold left stutter button and right sync button at the same time while plugging in USB cable.

- Both cue LED's should illuminate

Step 2: Press both cue buttons simultaneously and this will erase firmware

- left deck 'set' LED should be illuminated

Step 3: Using firmware uploader of your choice proceed to send firmware.

- You should see the LED's on the unit illuminate rapidly

Note:

Recommended updaters.

Win:

- 1) <http://www.midiox.com>
 - 2) <http://www.bome.com/products/sendsx>
- □ □ □ □

Mac:

- 1) <http://www.snoize.com/SysExLibrarian/>

Step 4: When finished, both cue LED's will be lit once again, press both simultaneously.

- Firmware upload is complete
- It is not needed to unplug the unit.

Do you require assistance?

Please contact support@numark.com